

Powerdot Mini



- A** - Installation into round hole
- B** - Installation into tailored hole

CONTENT:



x1




x1

- 1A** DRILL
Drill a hole in the table.




Ø51

- 2A** INSERT
Insert Powerdot into the hole and feed the power plug through the table and the plastic fastening nut.

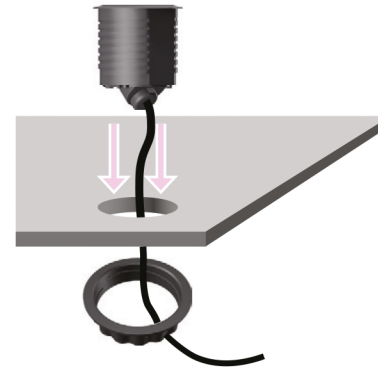


- 3A** TURN CLOCKWISE & PLUG IN
Turn the plastic fastening nut as far up the thread as possible. Make sure it has been thoroughly tightened. Lastly, plug the Schuko plug into the wall socket.

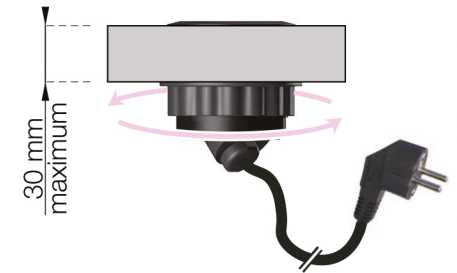

- 1 Schuko socket
/w 1250 mm cable




- 1B** MILL
Mill a hole in the table.

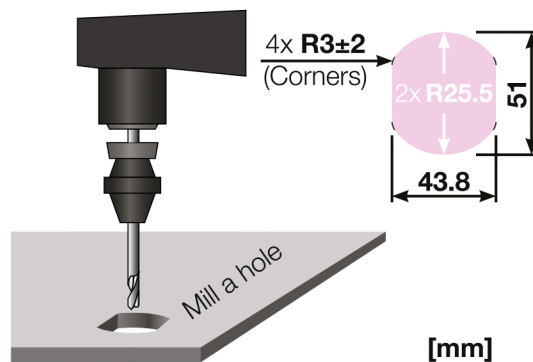

[mm]

- 2B** INSERT
Insert Powerdot into the hole and feed the power plug through the table and the plastic fastening nut.

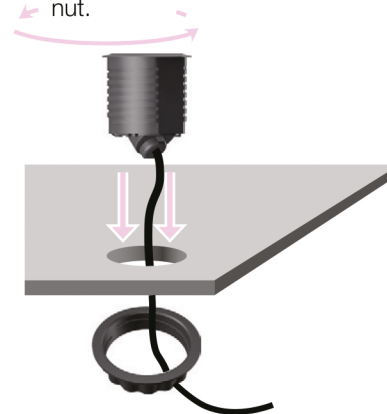

- 3B** TURN CLOCKWISE & PLUG IN
Turn the plastic fastening nut as far up the thread as possible. Make sure it has been thoroughly tightened. Lastly, plug the Schuko plug into the wall socket.

